

## INSTALLATION ACCESSORIES

Vendor	Description
<b>FIRE CABLE</b>	
<b>F0002</b>	<b>Fire Cable</b> Fire retardant cable 0.5 mm <sup>2</sup> 1 pair 100m roll
<b>F0209</b>	<b>Fire Cable</b> Fire retardant cable 0.8 mm <sup>2</sup> 2 Core 100m roll
<b>F0241</b>	<b>Fire Cable</b> Fire retardant cable 0.8 mm <sup>2</sup> 4 Core 100m roll
<b>F0003</b>	<b>Fire Cable</b> Fire retardant cable 1 mm <sup>2</sup> 1 pair 100m roll
<b>F0210</b>	<b>Fire Cable</b> Fire retardant cable 1.5 mm <sup>2</sup> 4 Core 100m roll
<b>BATTERIES</b>	
<b>B0831</b>	<b>Ultratech Battery 12VDC 7Ah</b> Ultratech Battery 12VDC 7Ah
<b>B1017</b>	<b>Energys Battery 12VDC 7Ah</b> Energys Battery 12VDC 7Ah 100% depth of discharge 250 cycles, 50% depth of discharge 550 cycles, 30% depth of discharge 1200 cycles, Life time 3 to 5 years
<b>B1003</b>	<b>Ultratech Battery 12VDC 18Ah</b> Ultratech Battery 12VDC 18Ah
<b>B1005</b>	<b>Ultratech Battery 12VDC 24Ah</b> Ultratech Battery 12VDC 24Ah
<b>B1007</b>	<b>Ultratech Battery 12VDC 40Ah</b> Ultratech Battery 12VDC 40Ah

## ANALOGUE ADDRESSABLE CONTROL PANELS

### KENTEC EN54 APPROVED PANELS

#### Syncro Series

<b>V81162M2</b>	<b>Syncro AS 2 Loop Control panel</b> Analogue Addressable Control Panel: Argus Protocol, Surface mount including loop card
<b>ENV6300403</b>	<b>Syncro Analogue 4 Loop Control panel</b> Addressable Control Panel, 0 Zone LED's: Surface mount including loop cards
<b>K232SYN</b>	<b>Thermal Printer Retrofit Kit</b> Thermal Printer Retrofit Kit
<b>S560</b>	<b>Syncro I/O - 16 Channel I/O board</b> Syncro I/O - 16 Channel I/O board
<b>S547</b>	<b>Syncro I/O - 8 Way Relay Extender Board</b> Syncro I/O - 8 Way Relay Extender Board
<b>S546</b>	<b>Syncro I/O - 6 Way Sounder Extender Board</b> Syncro I/O - 6 Way Sounder Extender Board



SYNCRO CONTROL PANEL